

REVO

Version 2.0







heritage

DELUXE TABLE RADIO

With docking for iPod and iPhone

DAB | DAB+ | FM | Internet Radio | Audio Streaming



-  Owner's Manual
-  Bedienungsanleitung
-  Manuel de l'utilisateur
-  Manuale dell'utente



TECHNICAL SUPPORT

Should you encounter problems using this product, please refer to the troubleshooting section on page 39 of this owner's guide. Alternatively, call Revo technical support on :

UK 01555 666161
From outside the UK + 44 1555 666161

Alternatively, e-mail support@revo.co.uk or visit the troubleshooting section of our website at: www.revo.co.uk/support

ENVIRONMENTAL INFO

PRODUCT DISPOSAL INSTRUCTIONS (WEEE DIRECTIVE)



The symbol shown here and on the product means that it is classed as Electrical or Electronic Equipment and should not be disposed with other household or commercial waste at the end of its working life.

The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) has been put in place to recycle products using best available recovery and recycling techniques to minimise the impact on the environment, treat any hazardous substances and avoid the increasing landfill.

For more information please contact your local authority or the retailer where the product was purchased.

RoHS COMPLIANT & CE MARK



This product has been designed to comply with international directives on the Restriction of Hazardous Substances (RoHS) and has been designed and type-tested to comply with EU requirements and carries a CE mark.

SAFETY WARNINGS

- Do not operate this radio near water
- Do not remove screws or casing parts
- Use only the power supply unit supplied
- Avoid small objects and liquids from entering the product



ISO 7000-0434

WARRANTY

Revo Technologies Ltd warrants to the end user that this product will be free from defects in materials and workmanship in the course of normal use for a period of one year from the date of purchase. This guarantee covers breakdowns due to manufacturing faults and does not apply in cases such as accidental damage, general wear and tear, user negligence, modification or repair not authorised by Revo Technologies Ltd.

To register your purchase please visit www.revo.co.uk/register

COPYRIGHTS AND ACKNOWLEDGEMENTS

Copyright 2011 Revo technologies Ltd. All rights reserved.

No part of this publication may be copied, distributed, transmitted or transcribed in any form or by any means, electronic, mechanical, magnetic, manual or otherwise, without the permission of Revo Technologies Limited.

REVO and HERITAGE are trademarks or registered trademarks of Revo Technologies Ltd. iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.

Revo Technologies Ltd
The Inox Building, Caldwellside, Lanark,
Scotland, United Kingdom, ML11 7SR

Tel: 01555 66 61 61
Fax: 01555 66 33 44

Int. Tel: +44 1555 66 61 61
Int. Fax: +44 1555 66 33 44

Email: enquiries@revo.co.uk

Website: www.revo.co.uk

DISCLAIMER

Revo Technologies Limited makes no representation or warranties with respect to the content of this publication, and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, Revo Technologies Limited reserves the right to make changes to this publication from time to time, without notification to any person or organisation.



CONTENTS

02	Technical Support
02	Environmental Info
02	Warranty
02	Copyrights and Acknowledgements
02	Disclaimer
03	Welcome / Overview / Unpacking
04	Anatomy
05	Remote Control
06	Power Supply
06	Set-Up
07	Controlling Heritage / Menu Structure
08 - 09	DAB Mode
10 - 11	DAB Mode Menu Options
12	FM Mode
13	FM Mode / AUX-IN Mode
14 - 16	iPod Mode
17 - 22	Internet Radio Mode
23	Internet Radio Portal
24 - 25	Setting Up A Music Server
26 - 28	Music Player Mode
29 - 31	Last.fm Mode
32 - 33	Alarm Clock
34 - 38	System Settings
39 - 40	Troubleshooting
41	Error Messages

WELCOME

Thank you for purchasing our Heritage radio, we are sure that it will provide you with many years of enjoyment and reliable service. This guide has been designed to quickly get you up-and-running with your radio, offer guidance on the more complex features of this product and provide information on safety, warranty details and troubleshooting.

HERITAGE OVERVIEW

Heritage is a contemporary reinterpretation of classic European table radio designs from the 60's. A multi-format digital radio that provides coverage of DAB, DAB+, FM and Wi-Fi internet radio - as well as wireless audio streaming and iPod/iPhone docking functionality.

Heritage is crafted using the finest quality materials and components. Its cabinet is constructed using a combination of aluminium and furniture-grade American walnut. Audio performance is delivered by a custom-designed 3" neodymium speaker driver, driven by a superb 7W amplifier. Lastly, Heritage benefits from a large, graphical OLED display and intuitive control system.

UNPACKING HERITAGE

Carefully remove Heritage from its packaging before removing the other items from the box.

The box should contain the following:


- Heritage radio
- Remote control
- iPod/iPhone dock adaptor kit
- Power adaptor with multi - country adaptors (UK, Euro, USA)
- Owner's Manual

Should any item be missing or damaged, please contact your point of purchase or call Revo directly on **+44 (0) 1555 66 61 61**

NOTE: Heritage's packaging should be retained for possible future use, it is the safest way to transport Heritage should it be necessary.




ANATOMY OF HERITAGE

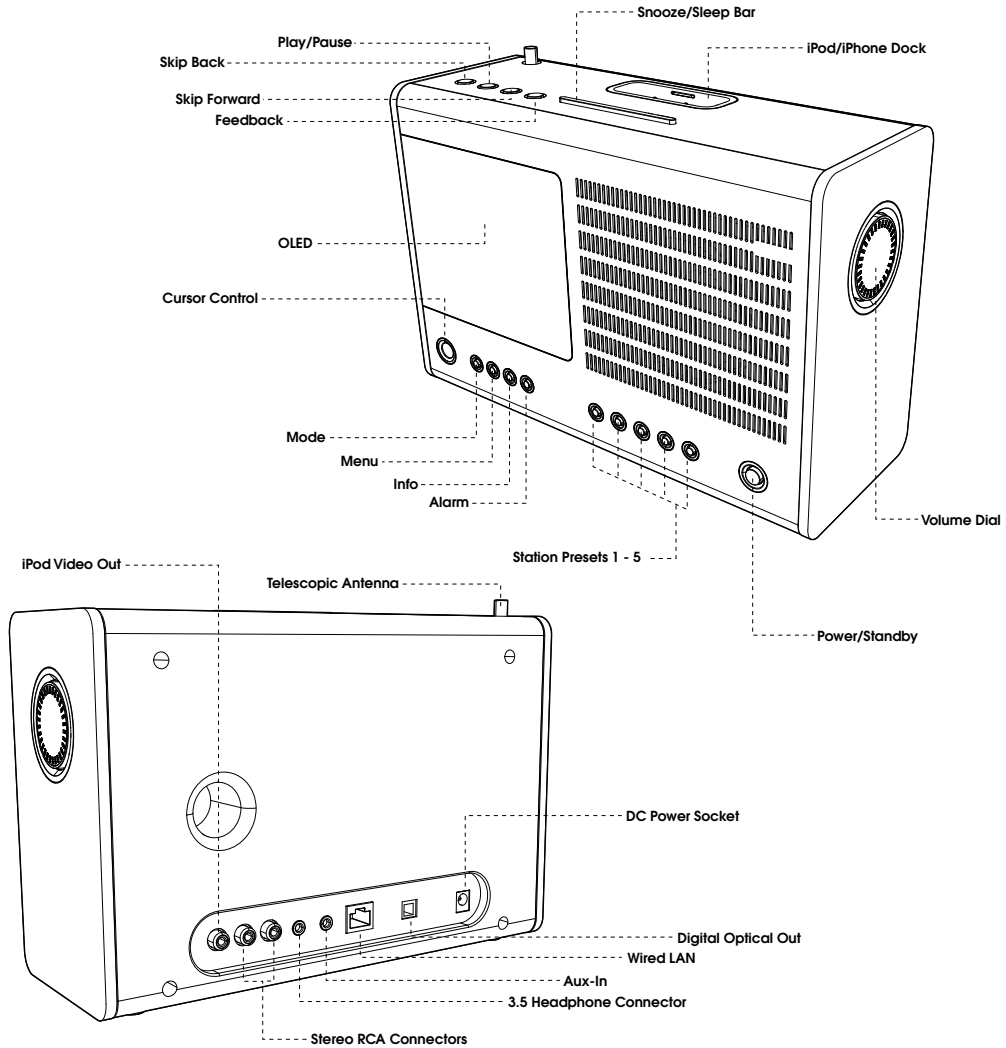



REMOTE CONTROL

- 01 - Mode
- 02 - Scroll up
- 03 - Menu
- 04 - Power
- 05 - Back
- 06 - Select
- 07 - Forward
- 08 - Volume increase
- 09 - Info
- 10 - Scroll Down
- 11 - Alarm
- 12 - Volume Decrease
- 13 - Presets 1- 10
- 14 - Sleep
- 15 - Snooze
- 16 - Skip Back (Fast Rewind)
- 17 - Play/Pause
- 18 - Skip Forward (Fast Forward)
- 19 - Feedback (Love/Ban)

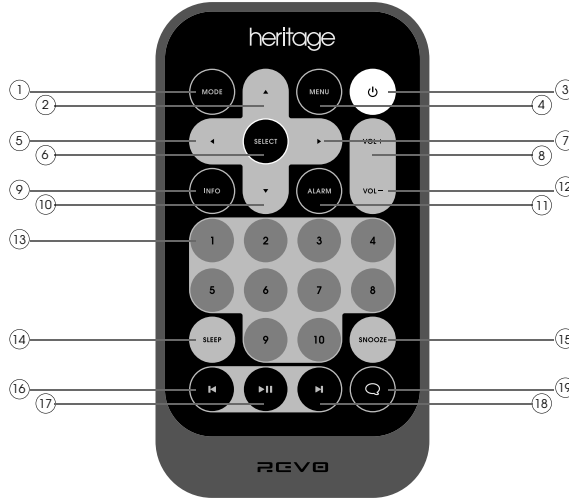


BATTERY REPLACEMENT

The Heritage remote control is powered by a single 3V lithium battery. Depending on usage, the battery should happily run for between 1 and 2 years.

Replace the battery when button presses seem sluggish, or when the operating range appears to have reduced significantly.

Replace the old battery with a new CR2025 lithium cell.


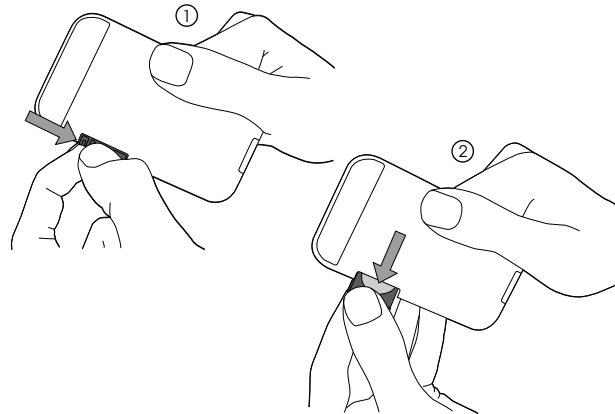




POWER SUPPLY (PSU)


Your Heritage radio is supplied with a multi-region power supply, meaning that it can be operated in a number of countries around the world.

Simply choose the correct adaptor for your country from the selection supplied, then follow the instructions below.

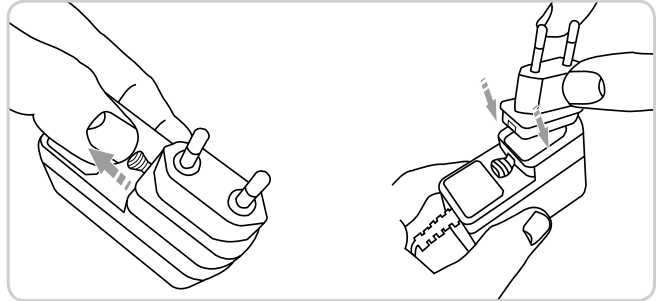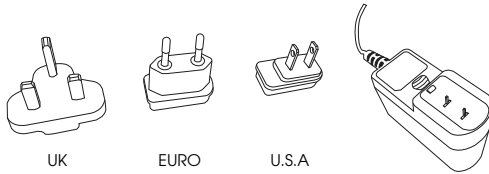


SET-UP


- ① Using the PSU supplied, **connect** one end to the DC power socket found on the rear of Heritage, then **plug** the opposite end into the mains socket on the wall.

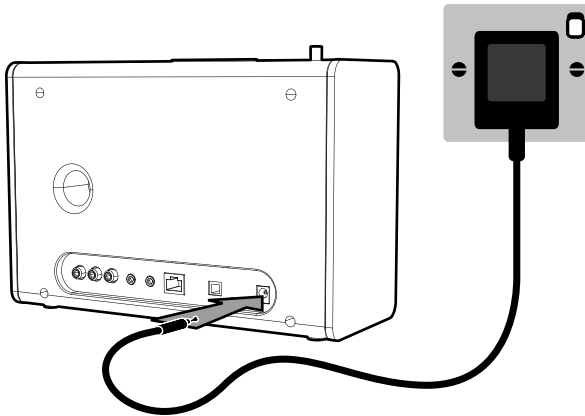

- ② **Fully extend** the antenna for DAB or FM operation

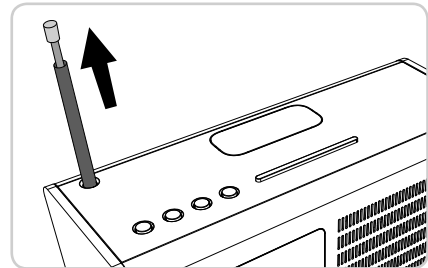

- ③ **Press** the POWER button **once** to start the initialisation process.

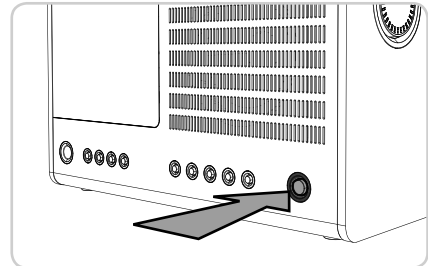



CONTROLLING HERITAGE


In order for you to get the most from your radio, it is important for you to understand how its control and menu system operates.

CURSOR CONTROL

Your radio uses a cursor based control system for ease of use.

The cursor control has five functions as follows:

- UP** Scrolls Up
- DOWN** Scrolls Down
- LEFT** Scrolls Left and moves back through menus
- RIGHT** Scrolls Right and moves forward through menus
- PRESS** Selects current option

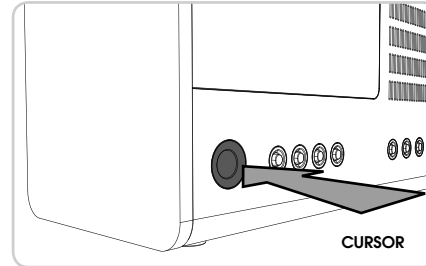


MENU BUTTON

Pressing the **MENU** button will take you to the Mode Menu for the particular mode of operation you are in. For example, pressing **MENU** when in DAB Mode will take you to the DAB MODE MENU.

Pressing the **MENU** button for a second time will return you to the 'playing screen' that you just left.

MODE BUTTON

Pressing the **MODE** button will sequentially cycle through each of Heritage's modes of operation. It is also possible to move between modes of operation via the **MAIN MENU** (see below).

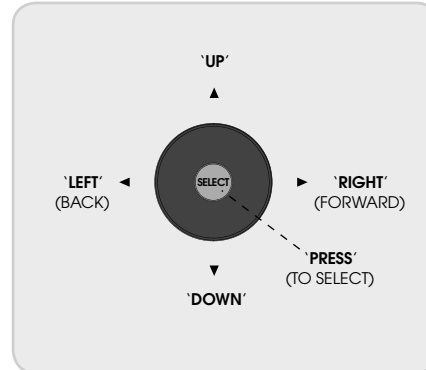

MENU STRUCTURE EXPLAINED

MAIN MENU

The MAIN MENU provides access to the following modes and sub-menus:

- Internet radio
- Music player
- Last.fm
- DAB radio
- FM radio
- iPod
- Auxiliary Input
- Alarms
- System settings

MODE MENUS

The Mode Menus are so called because they show the functions available within the currently selected mode.

Pressing the **MENU** button at any time will take you to the Mode Menu for the mode of operation your radio is currently in.



Each of the Mode Menus also includes a listing for MAIN MENU, allowing you to return to the top level MAIN MENU.

 


DAB RADIO MODE

GETTING READY FOR DAB OPERATION

Please ensure that the radio's antenna is extended before operation in DAB Mode.

To enter DAB MODE, **press** the  button until the DAB MODE intro screen is displayed, alternatively **press**  then select MAIN MENU, then DAB from menu option list.



On power-up, Heritage will automatically perform a full scan to see what stations are being broadcast in your area, before storing them alphabetically in the radio's memory.




It may be necessary to perform a manual scan from time to time, in order to update your radio's station list. This may be required for any one of the following reasons:

1. Station availability can change from time to time as new stations appear, or existing stations cease broadcasting.
2. If reception was poor during the initial automatic scan, for example the radio's antenna was not completely extended, it may be that the station list is incomplete or even empty.
3. If you have poor reception on some of the stations (resulting in broken or poor quality audio), you may wish to list only stations that have a strong signal strength.

To start a manual scan, **press** the  button then **select** FULL SCAN from the menu list.

To scan for only stations that have a strong signal strength, **press** then select LOCAL SCAN from the menu list.

When the scan is complete, your radio will list all available stations.


To remove stations that are listed but unavailable, **press**  then **choose** PRUNE INVALID. When asked whether you wish to "remove all invalid stations", **select** YES.





DAB RADIO MODE

SELECTING A STATION

To access your radio's station list, press UP, DOWN or LEFT on the cursor control at any time, alternatively press  then select STATION LIST.

Scroll through the available stations using UP and DOWN on the cursor control then either **press the select button** to **select** your station choice, or **tap** RIGHT.



FAVOURITE STATION PRESETS

Heritage allows you to store your favourite stations as presets, either via its 5 front panel mounted 'hot-keys', or 10 preset buttons located on the Heritage remote control.

To store the station you are currently listening to as a preset, simply **press** and **hold** a preset button until "Preset Stored" is display on your radio's screen. The preset number that has been assigned to the station will be displayed at the bottom of the screen.






If you want to change a particular preset in the future, repeat the process and the previously stored preset will be automatically overwritten.



DAB MODE MENU OPTIONS

STATION INFO

In DAB MODE, Heritage is capable of displaying various pieces of information on its screen. By **pressing** the  button, you can sequentially cycle through the following types of information.

STANDARD DAB SCREEN	Shows scrolling text info from broadcaster	
PROGRAMME TYPE	For example News, Rock Music, Classical etc.	
MULTIPLEX AND FREQUENCY	Multiplex owner and station frequency	
SIGNAL STRENGTH	Station's current signal strength	
BIT RATE AND CODEC	Audio format, sample rate, mono or stereo	
DATE	Today's date	



DAB MODE MENU OPTIONS

DYNAMIC RANGE COMPRESSION (DRC)

If you are listening to music with a high dynamic range in a noisy environment (for example, classical music while cooking), you may wish to compress the audio's dynamic range. This has the effect of making quiet sounds louder, and loud sounds quieter.



To change the DRC setting, **press**  then choose the **DRC** option, before **selecting** OFF, LOW or HIGH.

 
STATION ORDER

It is possible to choose the order of the DAB station list to be either ALPHANUMERIC, ENSEMBLE or VALID.

As the name implies, ALPHANUMERIC lists stations in alphanumeric order.

ENSEMBLE lists groups of stations that are broadcast together on the same ensemble, for example BBC or Central Scotland Local.

VALID lists valid stations first, alphanumeric, then off-air stations.



To change the station order, **press**  then **select** STATION ORDER, before choosing either ALPHANUMERIC, ENSEMBLE or VALID.

STATION ORDER	DESCRIPTION
ALPHANUMERIC	Display all stations in alphanumeric order.
ENSEMBLE	List active stations (ones that are currently broadcasting) before inactive ones.
VALID	Remove inactive stations from the station list.



FM RADIO MODE

FM OPERATION

Please ensure that the radio's antenna is extended before operation in FM MODE.

To enter FM MODE, **press** the  button until the FM MODE intro screen is displayed, alternatively **press**  then **select** MAIN MENU, then FM from menu option list.



 
If this is the first time that Heritage has been used in FM MODE, scanning will start at the beginning of the frequency range - otherwise Heritage will default to the station you were listening to last.



Pressing the select button will start the radio scanning for the next available station. Heritage will automatically stop scanning when a station is found.

To fine tune, use UP or DOWN on the cursor control to incrementally change the frequency.

When on an FM station that has a strong signal and is broadcasting RDS information, Heritage will display the station name and other pieces of text information on-screen.



FAVOURITE STATION PRESETS

Heritage allows you to store your favourite stations as presets, either via its 5 front panel mounted 'hot-keys', or 10 preset buttons located on the Heritage remote control.

To store the station you are currently listening to as a preset, simply **press and hold** a preset button until "Preset Stored" is display on your radio's screen. The preset number that has been assigned to the station will be displayed at the bottom of the screen.




If you want to change a particular preset in the future, repeat the process and the previously stored preset will be automatically overwritten.



FM RADIO MODE

FM SETTINGS

Press the  button to access the FM MODE MENU. From here you can set some FM preferences such as SCAN SETTING and AUDIO SETTING.

SCAN SETTING allows you to decide whether the radio should stop scanning only when it finds a station with a strong signal.

AUDIO SETTING gives you the option of listening to a station in mono, should the signal strength not be sufficiently strong to allow stereo reception.





AUX IN MODE

AUX IN MODE allows you to play audio from an external source (such as an MP3 player) through your radio.

To do so, connect your external audio source to the 3.5mm AUX IN connector on the rear of Heritage.

Turn the volume down low on both Heritage and, if adjustable, the external device.

Now press  until the AUX IN screen is displayed, alternatively press  then select MAIN MENU, then choose AUX IN.

Adjust the volume of Heritage and, if necessary, the external audio device as required.





iPod MODE



FITTING A DOCK ADAPTOR

Heritage is supplied with a selection of dock adaptors to fit most iPod/iPhone models.

Select the adaptor that is compatible with your iPod/iPhone using the compatibility table on the right - each one is numbered (see illustration ① below).

To fit the adaptor, **remove** the dock dust cover before **inserting** the adaptor into the recess that surrounds the dock connector (see illustration ②). If a dock adaptor for your specific iPod/iPhone model is not one of the adaptors included with your radio, please use the adaptor supplied by Apple as part of your iPod/iPhone kit.

Adaptor No.	iPod Model
9	iPod classic 80GB
10	iPod classic 120GB
12	iPhone
13	iPod nano (3rd generation)
15	iPhone 3G
16	iPod touch (2nd and 3rd generation)
17	iPod nano (4th generation)
18	iPod nano (5th generation)
19	iPhone 4
20	iPod touch (4th generation)

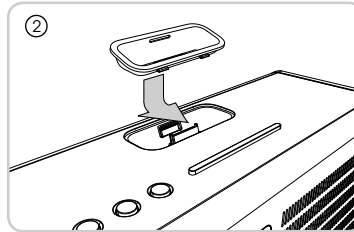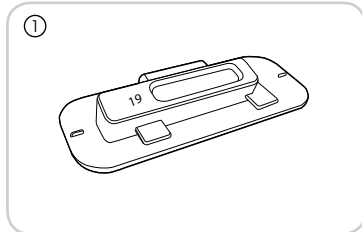

ENTERING iPod MODE

Connect your iPod/iPhone to the dock connector. Heritage will automatically ask if you would like to switch to iPod mode.

Select YES or NO using the cursor control.

If an iPod/iPhone is already connected to Heritage, **press** (MODE) until the iPod MODE intro screen is displayed, or **press** (MENU) then **select** MAIN MENU, then iPod.








iPod MODE

CONTROL AND PLAYBACK

Basic track control functions can be carried out by using the media controls located on the top face of Heritage.

Pressing  will start the currently selected track. **Pressing** it when a track is playing will PAUSE the current track.

Pressing  will advance to the next track. **Pressing and holding** will fast-forward.

Pressing  will skip-back to the previous track. **Pressing and holding** will fast-rewind.



Alternatively, your iPod/iPhone can be operated using the Heritage remote control, which offers advanced control of menus etc.


Lastly, it is possible to control the iPod/iPhone by using the controls on the iPod/iPhone itself.

VIDEO

Heritage is equipped with a set of composite video-out connectors, making it possible to view iPod/iPhone movies, slideshows etc. on your television - all directly from your radio.

To use this functionality, go to SETTINGS on your iPod/iPhone, select VIDEO, then switch TV OUT to ON. Now set the TV SIGNAL to either PAL or NTSC, depending on the broadcast system that your TV uses.

Should you need to buy a composite video cable, they can be purchased directly from the Apple Store.

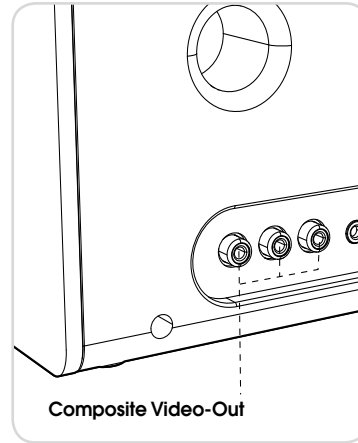


 







iPod MODE

NOW PLAYING INFO

When an iPod/iPhone has been docked and the authentication process has been completed, your radio will display the artist and track information for the current track (if this information is stored on your iPod/iPhone).

Heritage is capable of displaying various pieces of information about the current track and the iPod/iPhone that is connected. By **pressing** the  button, it is possible to sequentially cycle through the following types of information.

STANDARD SCREEN	Shows track name and artist	
iPod/iPhone TYPE	Shows model of iPod/iPhone currently connected	
AUTHENTICATION STATUS	Whether authentication was successful or not	
TRACK TIME	Shows track length and current position in track	
ALBUM TITLE	Displays album title if available	
DATE	Today's date	



INTERNET SETUP

USING THE INTERNET RADIO SETUP WIZARD

 
The first time you use Heritage in INTERNET RADIO MODE, you will be asked whether you would like to run the SETUP WIZARD. The 'WIZARD' will run through a series of questions, and is the simplest way to get internet radio up and running on your device.

You can run the SETUP WIZARD again at any time, it can be found under the NETWORK heading, in the SYSTEM SETTINGS MENU.

To set up your radio for online operation using the INTERNET WIZARD, follow these steps:

Press the select button to **select** YES, and start the SETUP WIZARD procedure.

- ① Choose and **select** your preferred hour format (12 or 24 hour).




- ② Choose and **select** UPDATE FROM NETWORK.



- ③ **Scroll** and **select** your local timezone from the menu.



 - ④ Choose and **select** your preferred daylight savings status.



- ⑤ **Scroll** and **select** your Wlan region.



 


INTERNET SETUP

- ⑥ **Scroll** and **select** your NETWORK. In some cases your radio may find more than one. Simply choose the one you want to use.

WIRED CONNECTIONS

If you would like to use your radio over a wired connection, rather than a wireless one, simply **choose** the WIRED option from the SSID list.




- ⑦ If your wireless network is not password protected, Heritage will automatically connect, and the following screen will be displayed:



- ⑧ If you **do** use password protection, **enter** your network password using the cursor control to **scroll** over and **select** the correct alphanumeric characters. When you have correctly entered your password, **select** OK.

 Select **BKSP** (back space) if you have entered an incorrect character.



Heritage will save the password into its memory. There will be no need to re-enter the password again.





INTERNET RADIO MODE

GETTING STARTED

To enter INTERNET RADIO MODE, **press** the  button until the INTERNET RADIO MODE intro screen is displayed, alternatively **press**  then **select** MAIN MENU, then INTERNET RADIO from the menu option list.



The INTERNET RADIO MENU comprises of the following options:

My Favourites: Used to navigate to your favourite stations. These can be set up by visiting the Frontier Silicon Radio Portal (using your PC or Mac). See page 23 for further information.

Local: A comprehensive list of all the stations being broadcast from within your own geographical area (or country).

BBC: Used as a shortcut to all BBC stations broadcast worldwide.

Stations: Find stations using a number of search criteria such as: location, genre, most popular etc.

Podcasts: Find Podcasts or 'Listen-Again' broadcasts by location, genre or search by name.

 
My Added Stations: Shows stations that you have personally added to your radio's station list via the Frontier Silicon Radio Portal. See page 23 for full details.

Help: Find your radio's ACCESS CODE here. Required to access the Frontier Silicon Radio Portal. See page 23.



CHOOSING A STATION

To choose a station, **select** STATION LIST from the INTERNET RADIO MENU, then **select** STATIONS using the cursor control.



You now have the option to choose or find a station using the following search criteria:

LOCATION (country of origin)	GENRE
SEARCH STATIONS (by name)	POPULAR STATIONS
NEW STATIONS	



INTERNET RADIO MODE

CHOOSING A STATION (Continued)

Using the cursor control, **scroll** through the options and **press select** to choose your search criteria.

For example, choosing LOCATION will give you an alphabetical list of continents/regions, and then a list of countries. Use the cursor control to **scroll** through the list and **press select** to choose the continent, then country. You will then be given the option of choosing ALL STATIONS or a GENRE, to further refine your search.



After selecting your search criteria, you will be presented with a list of stations. Simply **select** a station from the list to begin listening.

SEARCH

You can search for an internet radio station by name (if you know it), or by using a keyword from within its title.

To SEARCH for a station, **select** SEARCH STATIONS from the STATIONS MENU, then **enter** a keyword using the keyboard input screen (similar to the keyboard screen you used for password input).



If your station is found, simply **select** to listen.

If you searched for a keyword, Heritage will list all the stations found that contain that particular keyword. **Scroll** through the list and **select** your station.

CHOOSING A PODCAST

Podcasts (also referred to as 'Listen Again') are searched and selected in the same way as a regular station.

Select PODCAST from the INTERNET RADIO MENU, then search by location, genre or a combination of both.



The main difference when searching for a Podcast, is that when you have selected a station, you will then be presented with a list of Shows (or Podcasts) available from that station.

Simply **select** your choice from the list.





INTERNET RADIO MODE

 
MY FAVOURITES

It is possible to compile a list (or lists) of your favourite stations, allowing quick and easy access to a number of stations from different countries and genres.

To do this you must first register your radio with the Frontier Silicon Radio Portal. See the INTERNET RADIO PORTAL section on page 23.

To store a station as a favourite, **press** and **hold** the select button until FAVOURITE ADDED appears on the screen. The chosen station will now appear in the default favourites stations list.

To access the MY FAVOURITES list, **select** STATION LIST, then MY FAVOURITES, followed by STATIONS. You can now **scroll** through and **select** any station in the list.




MY ADDED STATIONS

If you have added any of your own stations to the internet radio station list (via the Frontier Silicon Radio Portal, see page 23), they will be listed here. The MY ADDED STATIONS option can be found under the STATION LIST MENU, in INTERNET RADIO MODE.

BBC

 The BBC option is a shortcut to the entire BBC station list. Simply **select** this option from the STATION LIST MENU, then **scroll** through and **select** a station in the normal way.



LAST LISTENED

When you enter INTERNET RADIO MODE, the last-listened station is automatically selected. To select another station that you've listened to recently, **select** LAST LISTENED. A full list will be displayed (the most recent being at the top).

 




INTERNET RADIO MODE

HELP

The HELP option can be found in the STATIONS LIST MENU. Under HELP you will find the ACCESS CODE that you require to register your radio on the Frontier Silicon Radio Portal (see page 23 for full instructions).



A helpful FAQ audio track can also be found under the HELP heading.

LOCAL

The LOCAL station list can be found under the STATION LIST MENU and will differ depending on which country you are currently located in. For example, if you are based in the UK, this selection will display stations originating from the UNITED KINGDOM. Likewise, if you are using your radio in Germany, this selection will display only stations that are being broadcast from Germany.



Select this option to navigate either all of the available local stations, or alternatively you can search the list by genre.



INTERNET RADIO PORTAL


ACCESSING ADDITIONAL FEATURES

Some of Heritage's more advanced internet radio features can only be accessed by visiting the Frontier Silicon Radio Portal.

In order to access these features you must first register your radio.

REGISTERING YOUR RADIO

In order to register your radio, you will need your radio's unique access code.

To find the access code, firstly **enter** INTERNET RADIO MODE, then **press** . **Select** STATION LIST, then HELP. Now **select** GET ACCESS CODE.

Write down the access code.

Now, using your PC or Mac, visit the portal website at - www.wifiradio-frontier.com

Click on the REGISTER HERE link (located on the left hand panel) to begin the registration process.

If you already have an account and wish to add an additional radio, log in to your account and **select** MY PREFERENCES, then ADD ANOTHER WI-FI RADIO.

When you have registered your radio with the portal, you can immediately take advantage of various additional features and services that it provides.





SETTING UP A MUSIC SERVER

In order for Heritage to be able to play music files from a connected computer, the computer must first be set up for media sharing.

UPnP media sharing allows devices like Heritage to play music from a shared media library, navigating through tag menus such as Artist, Album or Genre.

If you are running a PC with Windows Media Player 11 or later (WMP), or an Apple Mac with OS X 10 or later and a UPnP application installed, you can connect Heritage and stream audio.

NOTE: iTunes does not currently operate as a UPnP media server, but there are a number of third party software add-ons available that will allow you to access your iTunes library.


SHARING MEDIA WITH WINDOWS MEDIA PLAYER

The most common UPnP server is Windows Media Player (version 11 or later) although other UPnP platforms and servers may be used.

To set up WMP for media sharing, performs the following steps:


Ensure that your PC and radio are connected to the same network. Heritage will be recognised as 'Heritage' by your PC.

- 1 In WMP add to the media library the audio files and folders you want to share with Heritage (LIBRARY > ADD TO LIBRARY ...).

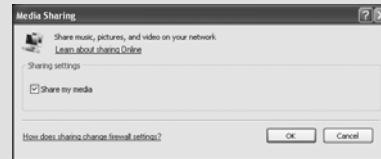

- 2 Make sure that the radio has access to the shared media by selecting it and clicking ALLOW. You can also set a name for the shared media settings.

The PC is now ready to stream music to your radio. The WMP UPnP service runs in the background; there is no need to start WMP explicitly.

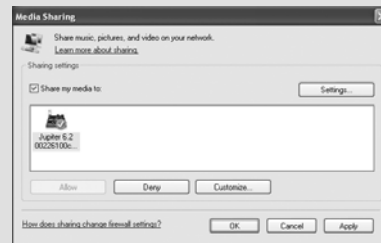



SETTING UP A MUSIC SERVER

SHARING MEDIA WITH A MAC

In order to connect Heritage to your Apple Mac, a third party UPnP server application is required. There are a number of applications available to download from the Internet.

One such application is EyeConnect. This is an easy to install media sharing application that enables Heritage to stream audio. EyeConnect can be downloaded from:

<http://www.elgato.com>

- ③ Once installed, EyeConnect can be found on the System Preference panel. When connecting Heritage, make sure EyeConnect is shown as running on its setup screen.

Heritage will appear as 'Jupiter 6.2' in the EyeConnect list of devices. The ENABLE box must be checked and the ACCESS selection set to ENABLE NEW DEVICES.

Your Mac is now ready to stream music to your radio. EyeConnect will normally run automatically after boot up.







MUSIC PLAYER MODE

PLAYING AUDIO TRACKS IN THE MUSIC PLAYER




MUSIC PLAYER MODE allows you to play audio files such as MP3s, AACs, WMAs or FLACs directly from a computer or music server on your local network.



To enter MUSIC PLAYER MODE, **press**  until the MUSIC PLAYER MODE intro screen is displayed, alternatively press  then select MAIN MENU, then MUSIC PLAYER from the menu option list.


Once in music player mode, **press** , then **select** either SHARED MEDIA.



You can navigate your way through the list using the cursor control, using UP and DOWN to scroll through the list, and either **Push** (SELECT) or RIGHT to advance through folders. When you reach your desired track, a short press of the select button will start the track playing, a long press will add the track to the playlist (see PLAYLISTS on page 28 for more information).

Audio tracks can also be controlled using the    buttons mounted on your radio's top panel.

Pressing and holding the  button will fast-rewind the track you are currently playing, while doing the same with the  button will fast-forward.

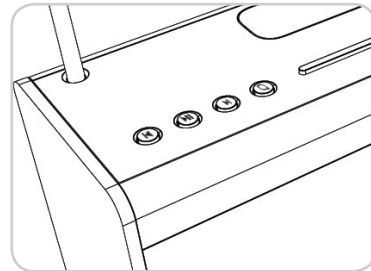



MUSIC PLAYER MODE

SHARED MEDIA (From a UPnP Media Server)

In MUSIC PLAYER MODE **select** SHARED MEDIA. If you have set up shared media (as described on page 24), you should see an entry, for the server you set up, example "SB-Laptop: Audio". If you have more than one computer sharing media, the alternatives are listed.

Select the shared media you want to play.



From this point on, the menus are generated from the shared media server (typically Windows Media Player). The first menu shows a list of media types, for example music, video, pictures and playlists. Heritage can only play music and playlists.

There is also a search function, which finds tracks in a similar way to Internet radio search, as described on page 20.

For music there are numerous ways of selecting tracks, including:

Genre | Artist | Album | Composer | Rating



Once you have found a track you want to play, **press** the select button to select. A **short press** plays the track immediately, while a **long press** will add the track to the PLAYLIST.

Note: Tracks played in UPnP mode are SROBBLED to Last.fm, if SCROBBLING is turned on in the Last.fm menu. For more information about SCROBBLING, see page 29.



MUSIC PLAYER MODE

PLAYLISTS

Heritage is capable of holding a queue of up to 500 tracks in its playlist. Playlist tracks can be mixed from multiple UPhP servers and USB devices. To manage the playlist, **select** MY PLAYLIST from the MUSIC PLAYER MENU.

To view the contents of the playlist, **scroll** through it using the cursor control. To play the playlist from a certain track, give the select button a **short press**. To delete a track from the playlist, give the select button a **long press**, then confirm YES to erase.



If you select a track/album/folder for instant playback, without using the playlist feature, the playlist will be preserved and will continue to be stored by your radio until you choose to delete it.

REPEAT/SHUFFLE


You can choose to repeat tracks or play them in random order by **selecting** REPEAT PLAY or SHUFFLE PLAY from the MUSIC PLAYER MENU.

NOW PLAYING INFORMATION

While a track is playing, Heritage will display the track and artist name (UPhP). There is also a progress bar with displays elapsed and total track time.



To view further track information, **press** .

Each time you **press** , another piece of information is displayed as follows:



UPhP: Track name/artist, progress bar/track times, album, codec/sampling rate, playback buffer and today's date.



LAST.FM MODE

 
In addition to its terrestrial and internet radio capabilities, Heritage is also capable of providing access to online music service Last.fm. Simply choose an artist or genre and let Last.fm build the perfect playlist from its library of 5 million tracks – unique to you, and fresh every time.

If you already subscribe to the service, you can use your existing Last.fm profile on Heritage, alternatively visit www.last.fm, complete a profile, then subscribe.

If you have a Trial Subscription Voucher, visit www.last.fm/voucher and follow the on-screen prompts.



ADDING A USER ACCOUNT

To enter LAST.FM MODE, **press** (MODE) until the LAST.FM MODE intro screen is displayed, alternatively **press** (MENU) then **select** MAIN MENU, then LAST.FM from the menu list.



To add an account, **select** LAST.FM SETUP from the menu, then **select** USER ACCOUNTS.

  Now **select** ADD NEW ACCOUNT and **enter** your LAST.FM user name and password using the on-screen keyboard.




SCROBBLING AND LOVE/BAN TRACKS

To get the most from LAST.FM, you can SCROBBLE all the tracks that you've listened to, in both UPhP and LAST.FM modes (and even those from an iPod or computer media server with the correct software plug-ins). This sends track names to LAST.FM, adding them to your library, and helps the service tailor recommendations (and neighbours) to your musical tastes. You can playback your LAST.FM library by **selecting** the YOUR LIBRARY station in the LAST.FM MENU.



 To turn SCROBBLING ON or OFF, **select** LAST.FM SETUP; then SCROBBLING, now **select** ON or OFF.



Note: if you intend to let other people use Heritage in LAST.FM MODE, you may want to turn SCROBBLING OFF. Alternatively, you could switch to another account.





LAST.FM MODE

While listening to LAST.FM you can choose to LOVE or BAN tracks (which SCROBBLES them even if SCROBBLING is set to OFF). Telling LAST.FM that you LOVE a track will add that particular track to your YOUR LOVED TRACKS list, allowing playback at a future time. BANNING a track will mean it will never be played again.

To LOVE or BAN a track **press** the  button and use the cursor to **select** either LOVE or BAN.



The  button can be found on the top face of your radio, or alternatively on the remote control. When listening to LAST.FM you can choose to SKIP a track by **pressing** the  button. It is not possible to PAUSE a track in LAST.FM.

Note: You can edit your library and track ratings by visiting the LAST.FM website.

PLAYING MUSIC

There are several types of streams, or 'radio stations' available in LAST.FM. To choose one, **select** STATION LIST from the LAST.FM MODE menu. If you are new to LAST.FM, we recommend that you perhaps start off with ARTIST or TAG RADIO, to allow you to be fully comfortable with the basic features of the service.

The following options are available:

YOUR LIBRARY

Plays all the tracks SCROBBLED to your profile, or tracks by artists you've added to your library. Can be edited on the LAST.FM website.

YOUR RECOMMENDATIONS

Plays tracks recommended to you based on your music profile and that of other listeners with similar tastes.

YOUR LOVED TRACKS

Plays tracks you have rated as LOVED.

YOUR NEIGHBOURHOOD

Plays tracks from the libraries of people on LAST.FM with similar music tastes to yours.



 


LAST.FM MODE

PLAYING MUSIC (continued)

ARTIST RADIO

Plays a selection of tracks by a certain artist, together with tracks by artists that have a similar musical style. Pick an artist by entering their name or part of their name (you don't have to enter the full name, so for example to find ROLLING STONES you can just **enter** ROLLING), then **pick** the artist from the list of search results and **select** OK.



TAG RADIO

Plays a selection of tracks tagged with certain keywords. Pick a tag word/genre by entering a word or phrase (its advisable to be as specific as possible, for example **BOLLYWOOD** rather than **BOLLY**, because tags are user-generated, so there tends to be many spurious tags connected to only a few tracks, which may then give an insufficient content error). **Pick** a tag from the list of search results and **select** OK.




HISTORY

Lists the tracks you have listened to recently, with the most recent track listed first. It is not possible to select a track from this list and listen to it again on demand.



ON-SCREEN INFORMATION

While LAST.FM is playing, the screen will display the track name and progress bar, with figures for elapsed and total track time. A LAST.FM icon is shown at the bottom of the screen to signify that you are in LAST.FM MODE.


During track playback, **pressing** the  button will allow you to cycle through other pieces of information such as artist, album, track name, radio name, codec/sampling rate, playback buffer and today's date.

 




ALARM CLOCK

SETTING AN ALARM

Heritage is able to store two individual alarm settings. To set or change an alarm, either **press** the  button, or **select** MENU, then MAIN MENU, then ALARM. **Select** which of the ALARM SETTINGS (Alarm 1 or Alarm 2) you would like to modify or enable.





Using the cursor control, **scroll** through the options below, setting your preferences.

 
- Enable: on/off
- Frequency: Daily, Once, Weekends or Weekdays.
- Time
- Mode: Buzzer, Internet Radio, DAB, FM or iPod or Last.fm
- Preset: Last listened or favourite station preset 1-10
- Volume: 0 - 20



When your preferences have been set, remember to **select** SAVE.

Heritage shows any active alarms by displaying an icon at the bottom of its screen.

When in STANDBY MODE, by simply pressing the  button, you can turn any alarms held in memory ON or OFF. Pressing  will cycle through ALARM 1 and ALARM 2 settings, enabling, and disabling them. If the ALARM icons are displayed, the alarm is enabled. If no alarm icon is shown, the alarms are switched off.



STOPPING AN ALARM

When an alarm is sounding, pressing **any** one of Heritage's buttons will STOP the alarm.

When the alarm has been cancelled, an ALARM OFF message will be displayed on Heritage's screen.






ALARM CLOCK

SLEEP MODE


By using the SLEEP function, you can set Heritage to automatically switch itself into STANDBY mode. The SLEEP mode can be engaged in one of two ways:

The quickest method is via the SNOOZE BAR. Simply **tap** the SNOOZE BAR to cycle through a range of pre-set SLEEP durations, from SLEEP OFF, through 15, 30, 45 and 60 minutes.




Alternatively, **press**  then **select** MAIN MENU, then SLEEP. You can now set the SLEEP timer to any one of the following pre-sets.

When you have selected a sleep duration, Heritage will return to the MAIN MENU.


Press  to return to the NOW PLAYING screen.

SNOOZE FUNCTION

Heritage includes a SNOOZE feature and incorporates a dedicated SNOOZE BAR, found on the top face of the radio. SNOOZE allows you to temporarily silence the alarm for a period of up to 30 minutes.

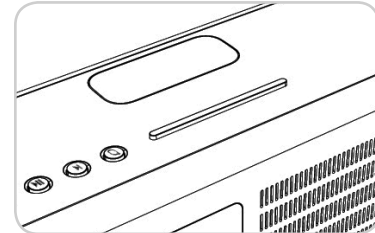

 The SNOOZE duration can only be set when your radio is actually in the process of alarming. At this point, simply **tap** the SNOOZE BAR to cycle through a range of pre-set SNOOZE durations, either 5, 10, 15 or 30 minutes.



When SNOOZE is activated, Heritage will return to standby for the set period with the icon of the SNOOZED alarm shown on-screen.



SYSTEM SETTINGS

EQUALISER

Heritage provides the user with a significant degree of control over its standard (factory default) audio settings. This includes control over BASS and TREBLE, LOUDNESS and the ability to use one of a number of preset EQ settings. It is also possible to create your own personalised EQ setting - known as "My EQ".

 
To adjust the audio settings, **press**  then **select** MAIN MENU, followed by SYSTEM SETTINGS. Now **select** EQUALISER from the menu.

Heritage will display a list of nine EQ options as follows:
Normal, Flat, Jazz, Rock, Movie, Classic, Pop, News and My EQ.



Simply **select** your preference from the list by highlighting your option and **pressing** the select button. Heritage will now store this setting in its memory. For reference, the current EQ setting is highlighted by an asterisk (*) in the EQ list.

To configure your own personal EQ setting, **select** MY EQ PROFILE SETUP from the EQUALISER menu. Now **adjust** the BASS and TREBLE levels, decide whether you would like the LOUDNESS function OFF or ON - before selecting SAVE. Your personalised EQ setting can now be selected by choosing MY EQ from the EQUALISER menu.





SYSTEM SETTINGS

NETWORK

The NETWORK MENU can be found under SYSTEM SETTINGS in the MAIN MENU and includes an entry for the INTERNET WIZARD, which will assist you in setting up your radio's internet connection.



For the more experienced user, a variety of manual settings can also be accessed from here, as follows:

INTERNET WIZARD :

Simplifies the setup of your radio's internet connection by taking you through step-by-step instructions.

PBC WLAN SETUP :

Used to pair your radio with a router that uses WPS security.

VIEW SETTINGS :

View the MAC address, Wlan region, etc.

WLAN REGION :

Where you are using your radio - Europe, USA etc.

MANUAL SETTINGS :

Detailed control of Wired and Wireless connections.

NETWORK PROFILE :

Shows the names of the last four wireless networks Heritage has been connected to.



NOTE: Heritage remembers the last four wireless networks it has connected to, and automatically tries to connect to whichever one of them it can find. It's possible however to delete unwanted networks, simply select SYSTEM SETTINGS, then NETWORK, then NETWORK PROFILE. Now **select** the network profile you'd like to delete by selecting and confirming delete YES.



SYSTEM SETTINGS

TIME / DATE

Found in the SYSTEM SETTINGS menu, this menu offers you the option of changing a number of time/date related settings. The TIME/DATE menu has three listings as follows:

SET TIME / DATE : Allows you to manually set the time/date.

AUTO UPDATE : Choose from three different automatic setting options.

SET FORMAT : Choose whether you would like to use 12hr or 24hr formats.



Update from DAB :

 
Automatically takes time/date from DAB signal. Heritage needs to have been operated in DAB MODE (and have received a signal) before this information can be extracted.

Update from FM :

Sets time/date from FM broadcast. Like DAB, Heritage needs to have been operated in FM MODE, and have received RDS information before time/date information can be extracted.


Update from Network :

Takes time/date from your internet connection.




BRIGHTNESS

Heritage allows a degree of control over the brightness of its OLED display, meaning that both its STANDBY and POWER ON brightness levels can be independently set to either HIGH, MEDIUM or LOW brightness levels.

To change the brightness settings, **press**  then **select** MAIN MENU, followed by SYSTEM SETTINGS. Now **select** BRIGHTNESS from the menu list. You will now be able to modify the default brightness level settings for the two modes of operation - STANDBY and POWER ON.

 Select the mode you'd like to change from these two options, then choose your desired brightness level. Your chosen settings will be held in memory indefinitely, but can be changed at any time.





SYSTEM SETTINGS

LANGUAGE

The default language on your radio is English, though 12 other languages are supported as follows:

Danish Dutch Finnish French German Italian
Norwegian Polish Portuguese Spanish Swedish Turkish

 
To change the current language setting, **select** SYSTEM SETTINGS from the MAIN MENU, then LANGUAGE, then **select** your choice.



FACTORY RESET

By **selecting** FACTORY RESET from the SYSTEM SETTINGS menu, you can reset Heritage to its default factory values, erasing any personal settings that may have been configured (time/date, network configuration and presets will be erased). However, Heritage's current software version is maintained, as is its registration with the internet radio portal. Internet radio favourites are therefore retained, unless you re-register your radio with another account on the portal.

To perform a factory reset, **press**  then **select** MAIN MENU, followed by SYSTEM SETTINGS, then FACTORY RESET. Now answer YES.



SOFTWARE UPDATES

From time to time we will make software updates available for your radio. These are necessary for general maintenance reasons, as well as for adding additional functionality to your radio. Software updates are carried out 'over-the-air', via your broadband connection.


Heritage will check for software updates each time it is switched on, and if an update is available, will ask you to confirm that you'd like to go ahead and commence the download.

 
Please note that after a software upgrade, all user settings are maintained.



SYSTEM SETTINGS


SOFTWARE UPDATES (Continued)

If you'd prefer to manually check for software updates, **press**  then **select** MAIN MENU. Now choose SYSTEM SETTINGS, then SOFTWARE UPDATES. **Select** AUTO-CHECK SETTING then choose NO when prompted.




To manually check for updates, **select** CHECK NOW from the SOFTWARE UPDATES menu.

 CAUTION: *Before commencing a software upgrade, ensure that Heritage is plugged into a stable mains power connection. Disconnecting power during a software update may permanently damage your radio.*



SETUP WIZARD


The SETUP WIZARD simplifies the set-up of both time/date and internet settings, by running through a series of questions.

To access the SETUP WIZARD, **press**  then **select** MAIN MENU, followed by SYSTEM SETTINGS. Now **select** SETUP WIZARD from the menu list.

INFO

When dealing with a technical support issue, you may be asked for the SOFTWARE VERSION or RADIO ID number. Both these pieces of information can be found under the INFO heading, in the SYSTEM SETTINGS menu.



Press  then **select** MAIN MENU, followed by SETTINGS, then INFO.



TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTIONS
FM: HISS DAB: Burbling/Intermittent Cut-Out	Low signal strength.	Check/move antenna. Move radio to another location. Rescan local (high-strength) stations only. For DAB, check local coverage at www.ukdigitalradio.com/coverage
DAB: 'No stations available'	Low signal strength.	As above, then rescan stations.
Cannot connect to network	Network down.	Check that network is working between computer and the router.
	Router restricts access to listed MAC addresses.	Obtain the Heritage MAC address from MENU > SYSTEM SETTINGS > NETWORK > VIEW SETTINGS and add to router list <small>NOTE: Heritage has separate MAC addresses for wired and wireless networks; only the current network adaptor method address is displayed, but the other address can be obtained by changing the first pair of digits between '00' (wireless) and '02' (wired)</small>
	Insufficient Wi-Fi signal strength.	Check distance to router. See if a computer can connect to the network in this location.
	Unknown encryption method.	Change encryption method on router. Heritage supports WEP, WPA and WPA2.
	Unusual network configuration.	Setup network manually through MENU > SYSTEM SETTINGS > NETWORK > MANUAL SETTINGS
	Firewall preventing access.	Check the following ports are open on the router: UDP and TCP ports 80 and 123 DNS port 53 Windows shares: ports 135 - 139 and 445 Windows media player: varies - Non-Microsoft firewalls may require configuration for UPnP.



TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTIONS
Cannot connect to Internet	Internet connection down	Check that the Internet is working for a computer connected to the same network.
	Firewall preventing access	Check the following ports are open: UDP and TCP ports 80 and 123 DNS port 53. Some Internet radio stations may require additional ports to be opened.
Cannot play particular Internet radio station	Station not broadcasting Overloaded or insufficient bandwidth. Station broadcasting using unknown codec. Link out of date.	Try other stations. Try listening on computer via Internet radio portal website. Try later.
Cannot play Last.fm	'Unauthorized' message	Account details wrong. Account details not entered. Region not supported. (Last.fm is currently restricted to particular regions e.g. US/UK) due to licensing issues.
Last.fm: Insufficient content to play	There are not enough tracks available and licensed to play for the particular artist or tag radio station you have.	Select a different radio station.



ERROR MESSAGES

MESSAGE	DESCRIPTION	EXAMPLE
Failed to connect	Correct key entered, but router rejects request.	MAC filtering enabled on router.
Format error	Cannot recognise file format - independent of network.	Received .wma, but found that the stream wasn't WMA when trying to decode.
Network error	Problem past router - incorrect data being received from network.	Data obtained from server is unreadable.
Network timeout	Problem past router - no response being received from network.	Streaming IR station and suddenly station becomes unavailable.
No UPnP media found	No UPnP servers found.	
Service not available (DAB)	No DAB reception.	
Unauthorised	Access not granted by UPnP server.	Allow access for Heritage in UPnP server settings.
Update failed	Software upgrade failed.	
Network not ready	problem with connection to router.	Router switched off.



NOTES



REVO

TECHNICAL SUPPORT

TEL - + 44 (0) 1555 666161

E-MAIL - support@revo.co.uk

WEB - www.revo.co.uk/support



"Made for iPod", and "Made for iPhone", means that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.